




ELITE Series™

**PORTABLE GENERATOR
GÉNÉRATEUR PORTATIF
GENERADOR PORTÁTIL**

**Illustrated Parts List
Les Parties illustrées Enumèrent
Las Partes ilustradas Listan**

**01893
(6000W ES)**

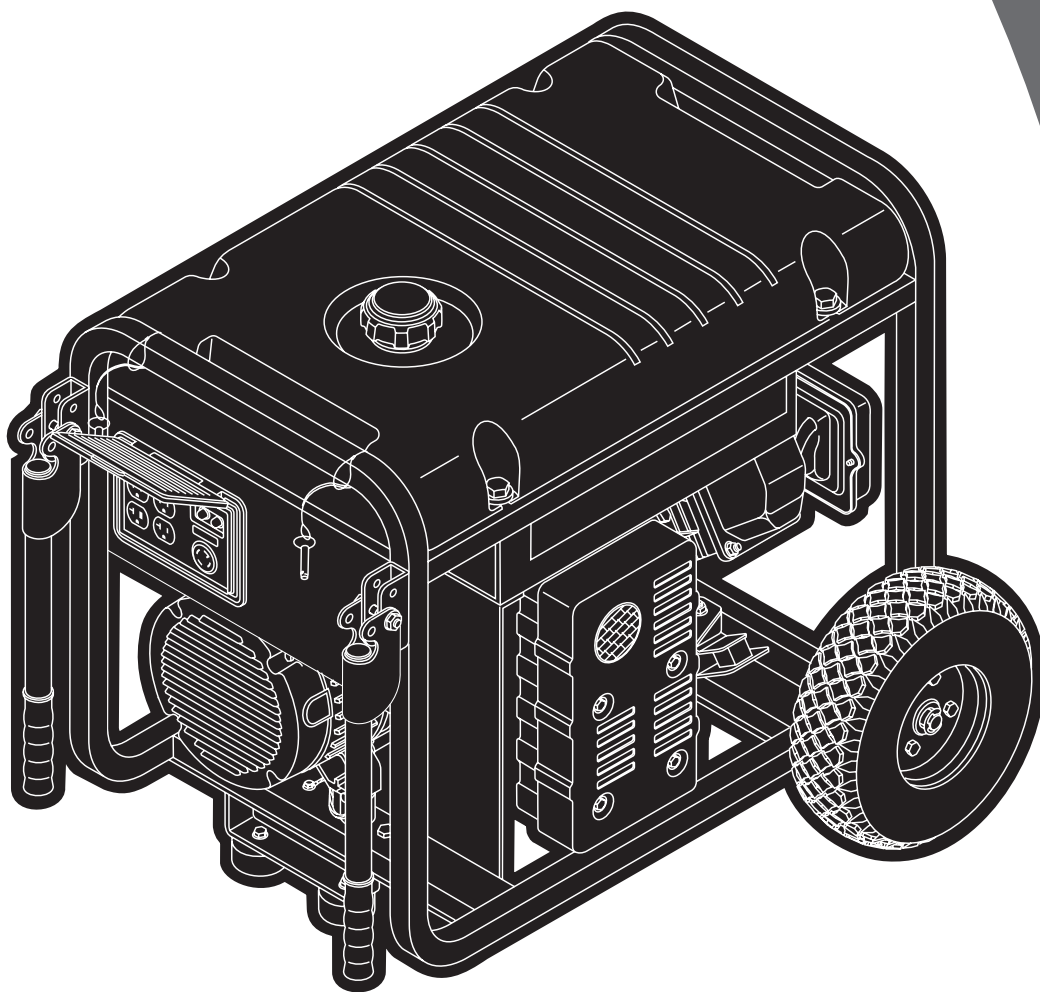

Questions? Help is just a moment away!

Vous avez des questions? Vous n'avez pas besoin d'aller loin pour trouver de l'aide!

Preguntas? La ayuda es justa un momento lejos!

Call: **Generator Helpline - 1-800-743-4115** M-F 8-5 CT

Appelez: **Ligne d'assistance de Générateur - 1-800-743-4115** M-F 8-5 CT

Llamada: **Generador Helpline - 1-800-743-4115** M-F 8-5 CT


**BRIGGS & STRATTON POWER PRODUCTS GROUP, LLC
JEFFERSON, WISCONSIN, U.S.A.**




0 24847 05234 3

IPL No. 191910GS
Revision 3 (05/20/2003)


SCHEMATIC

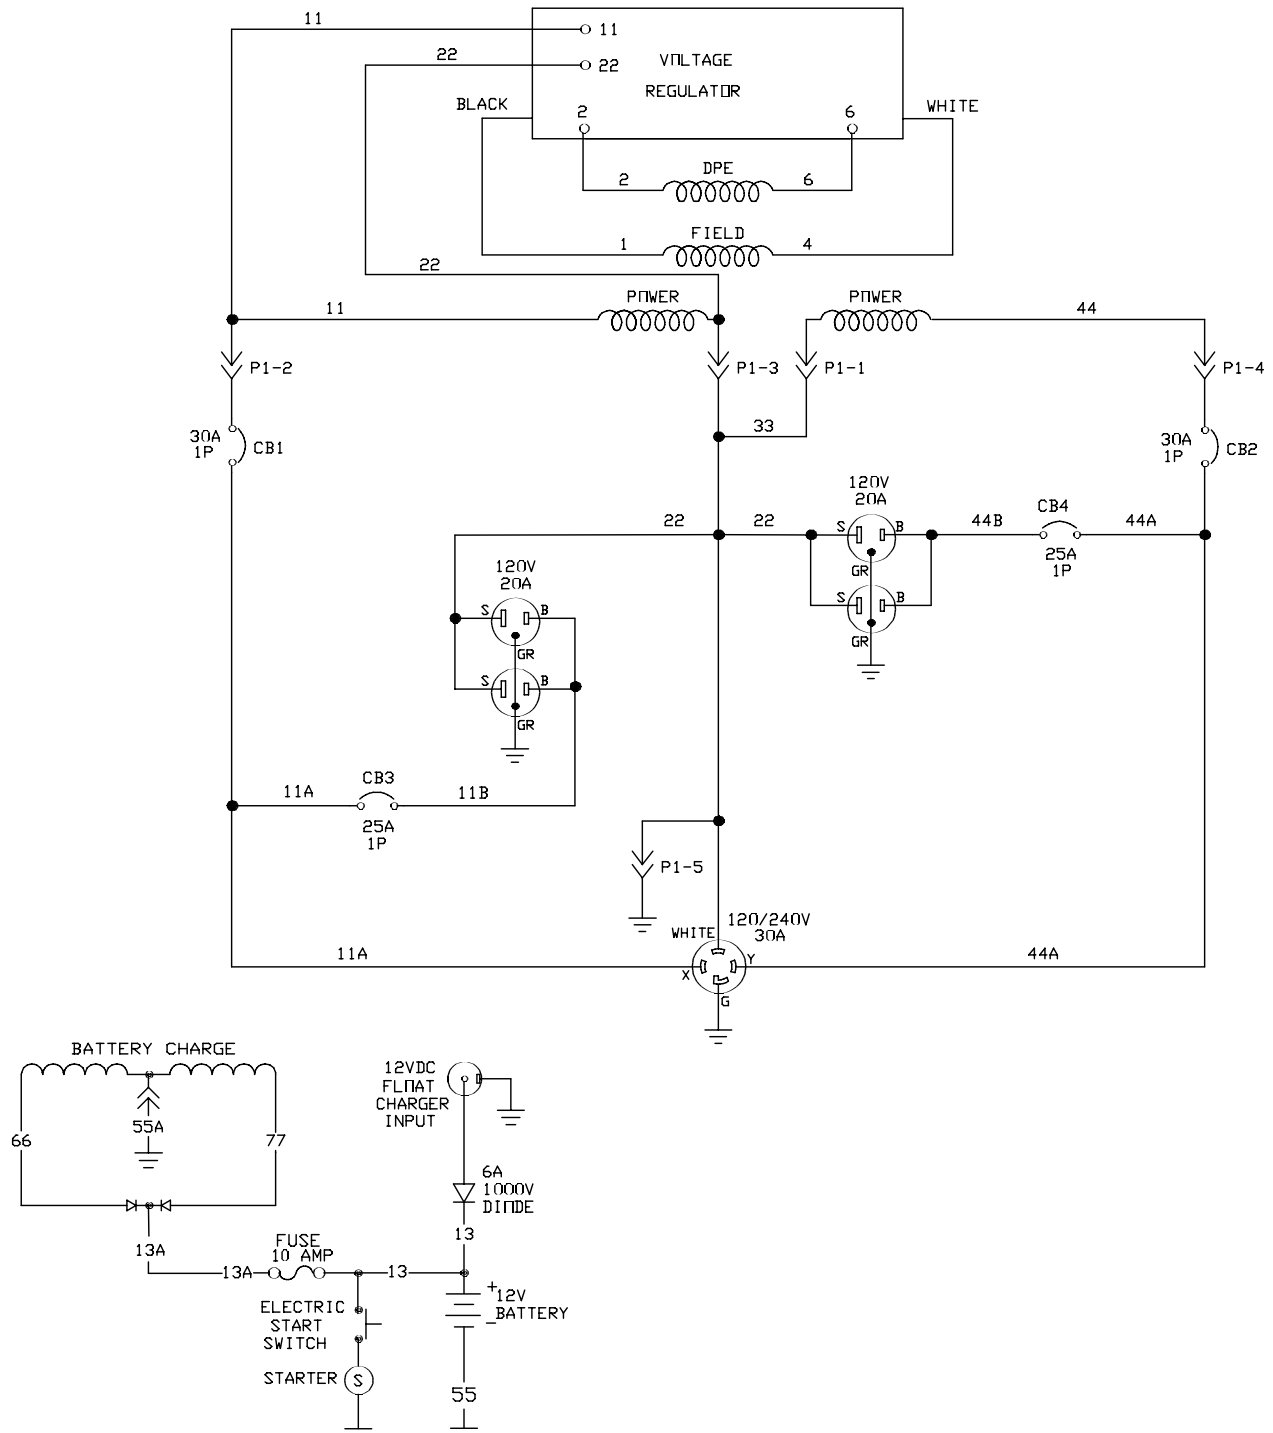

WIRING DIAGRAM

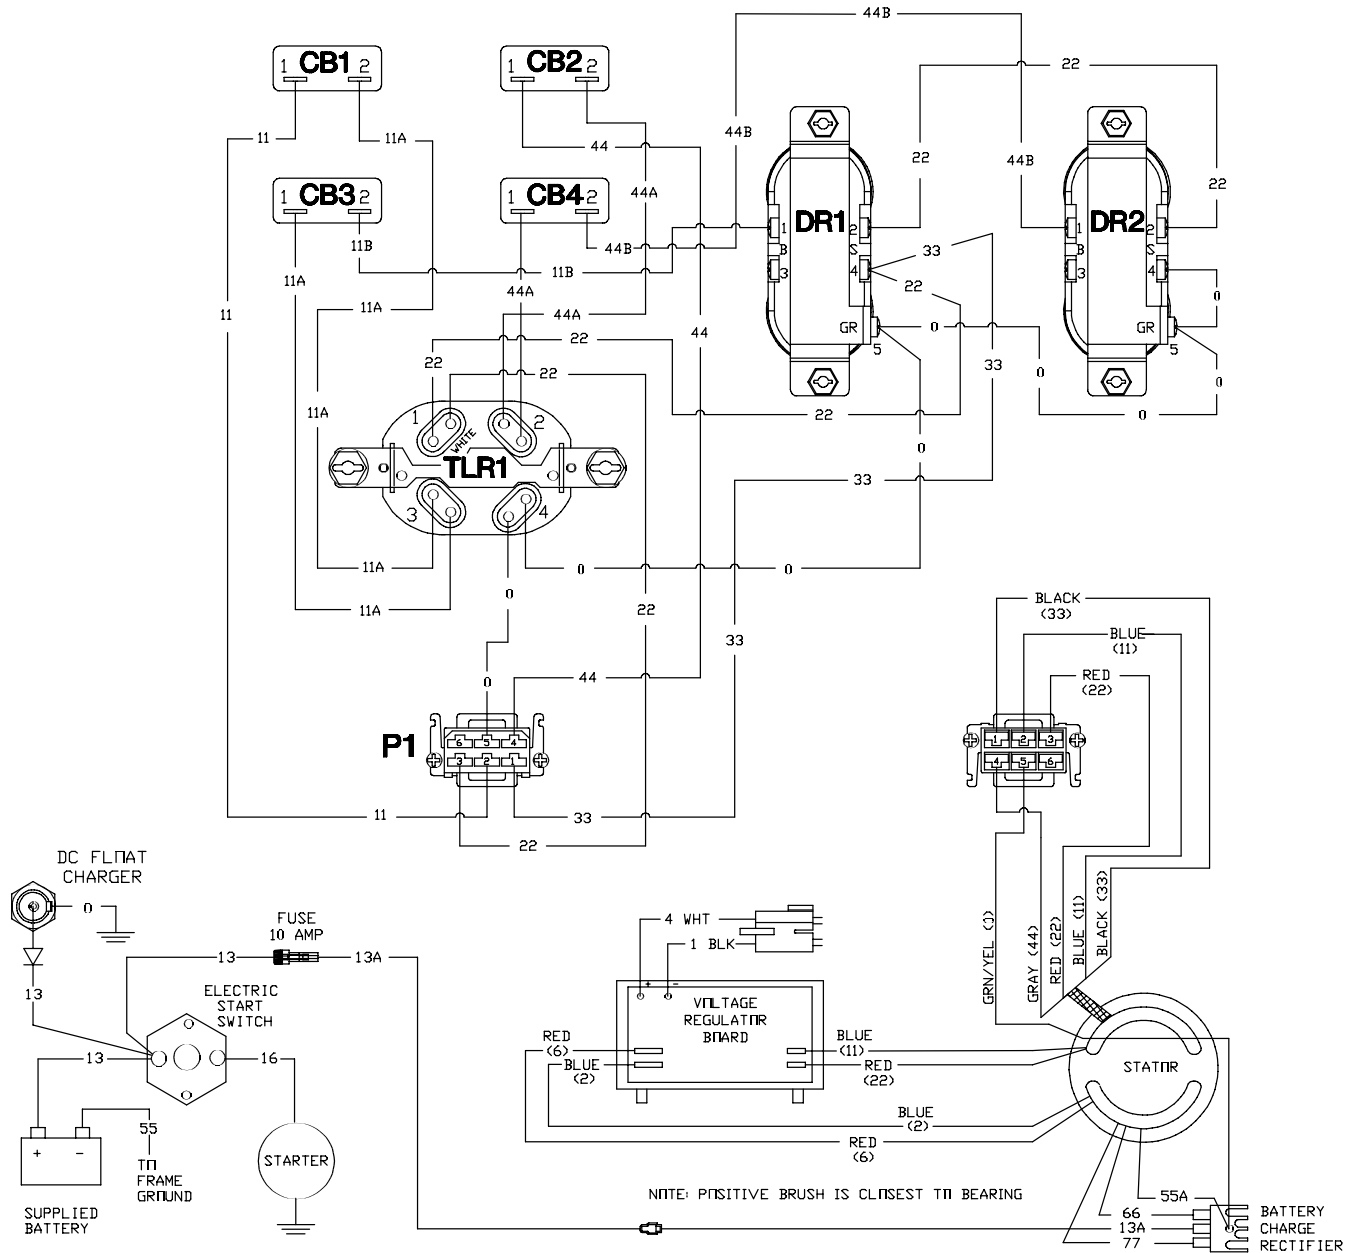


EXPLODED VIEW - MAIN UNIT

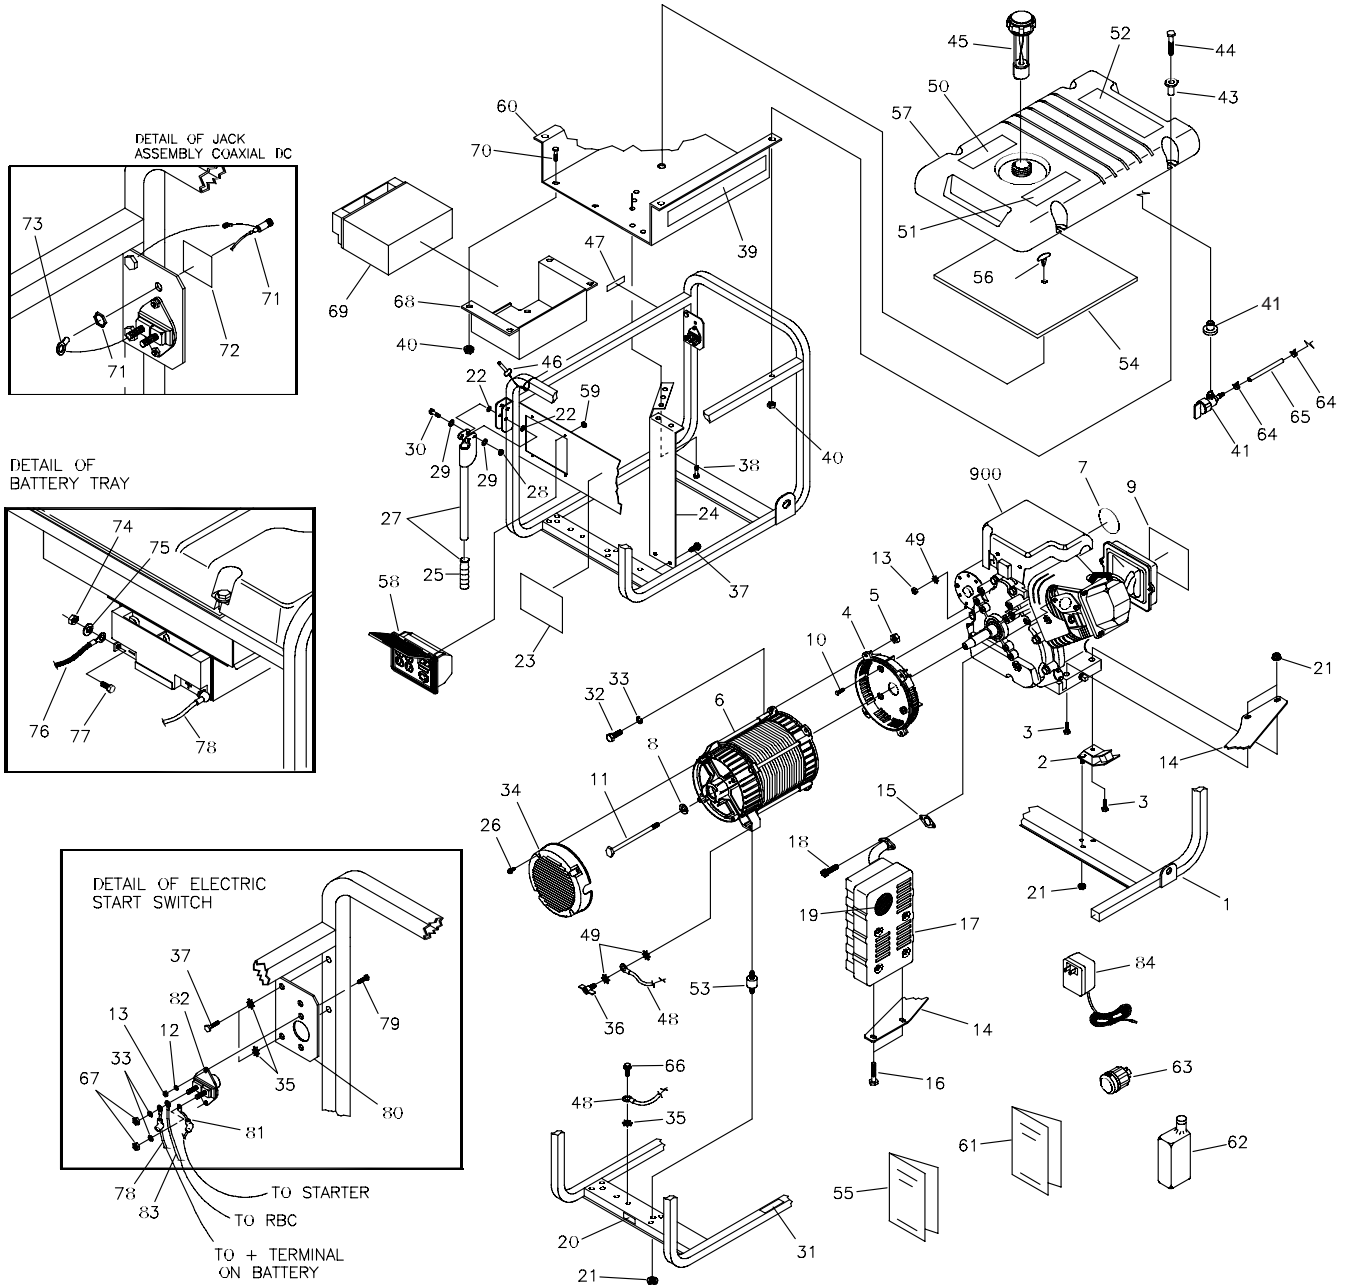

PARTS LIST - MAIN UNIT


Item	Part #	Qty.	Description	Item	Part #	Qty.	Description
1	M190305GS	1	CRADLE	44	78831BGS	4	SCREW
2	70642GS	2	MOUNT,Vibration	45	B4363GS	1	CAP, Fuel Gauge
3	84346GS	3	SCREW	46	B4135GS	2	PIN, with Lanyard
4	190220GS	1	HOUSING, Engine Adapter	47	191435GS	1	DECAL, Fuel Shut-off
5	45771GS	4	NUT	48	14353621GS	1	WIRE, Ground
6	NSP	1	ASSY, Alternator (see page 6)	49	26850GS	3	WASHER
7	192639GS	1	DECAL, Recoil	50	188333GS	1	DECAL, Instruction, Fuel Level
8	96796GS	1	WASHER	51	92982GS	1	DECAL, Danger
9	192017GS	1	DECAL, Cover, Air Cleaner	52	189235GS	1	DECAL, Start Instructions
10	190274BGS	4	SCREW	53	85652GS	2	MOUNT,Vibration
11	187365FGS	1	SCREW	54	92665GS	1	INSULATION
12	22097GS	2	WASHER, Lock	55	275092	1	MANUAL, Engine
13	22127GS	3	NUT	56	85000GS	1	CLIP, Insulation
14	189009GS	1	BRACKET, Muffler	57	B1998GS	1	ASSY, Tank, Fuel (Includes Item 41)
15	695398	1	GASKET, Exhaust	58	191757GS	1	ASSY, Control Panel (see page 7)
16	66476GS	2	SCREW, w/Lock Washer	59	189164GS	4	NUT
17	189008GS	1	MUFFLER	60	192982GS	1	SHIELD, Heat
18	60706GS	2	SCREW	61	191958GS	1	MANUAL, Owners
19	83083GS	1	SCREEN, Spark Arrest	62	BB3061GS	1	BOTTLE, Oil
20	B4986GS	1	DECAL, Ground	63	43438GS	1	PLUG, 250V, 30A
21	67989GS	9	NUT	64	48031CGS	2	CLAMP, Hose
22	187104GS	4	WASHER, Nylon	65	30340GS	1	HOSE, Fuel
23	192019GS	1	DECAL, Panel, Control	66	86292GS	1	SCREW
24	192984GS	1	SHIELD, Heat	67	24114GS	2	NUT
25	B4605GS	2	GRIP, Handle	68	192985GS	1	TRAY, Battery
26	74908GS	4	SCREW	69	B4489GS	1	BATTERY
27	B187113GS	2	ASSY, Handle (Includes Item 25)	70	43116GS	4	SCREW
28	49820GS	2	NUT, Nylok	71	192531GS	1	ASSY, Jack, DC
29	22145GS	4	WASHER	72	189198GS	1	DECAL, Instruction
30	39287GS	2	SCREW	73	58359GS	1	LUG
31	191436GS	1	DECAL, Hot Muffler	74	52856GS	2	NUT
32	43107GS	4	SCREW	75	23897GS	2	WASHER
33	22129GS	6	WASHER, Lock	76	185939KGS	1	ASSY, Wire
34	186347GS	1	COVER, Bearing Carrier	77	52618GS	2	SCREW
35	23762GS	3	WASHER	78	189302CGS	1	ASSY, Wire
36	86494GS	1	SCREW, Wing	79	22287GS	2	SCREW
37	B2153GS	4	SCREW	80	188987GS	1	BRACKET, Switch
38	56893GS	5	SCREW	81	189302GGS	1	ASSY, Wire
39	192148GS	2	DECAL, Heat Shield	82	77282GS	1	SWITCH, Starter
40	77395GS	8	NUT, Lock	83	192355GS	1	ASSY, Wire
41	192980GS	1	ASSY, Valve, Fuel, SRV	84	B4177GS	1	CHARGER, Battery
43	83465GS	4	GROMMET, Tank	900	NSP	1	ENGINE

EXPLODED VIEW AND PARTS LIST - ALTERNATOR

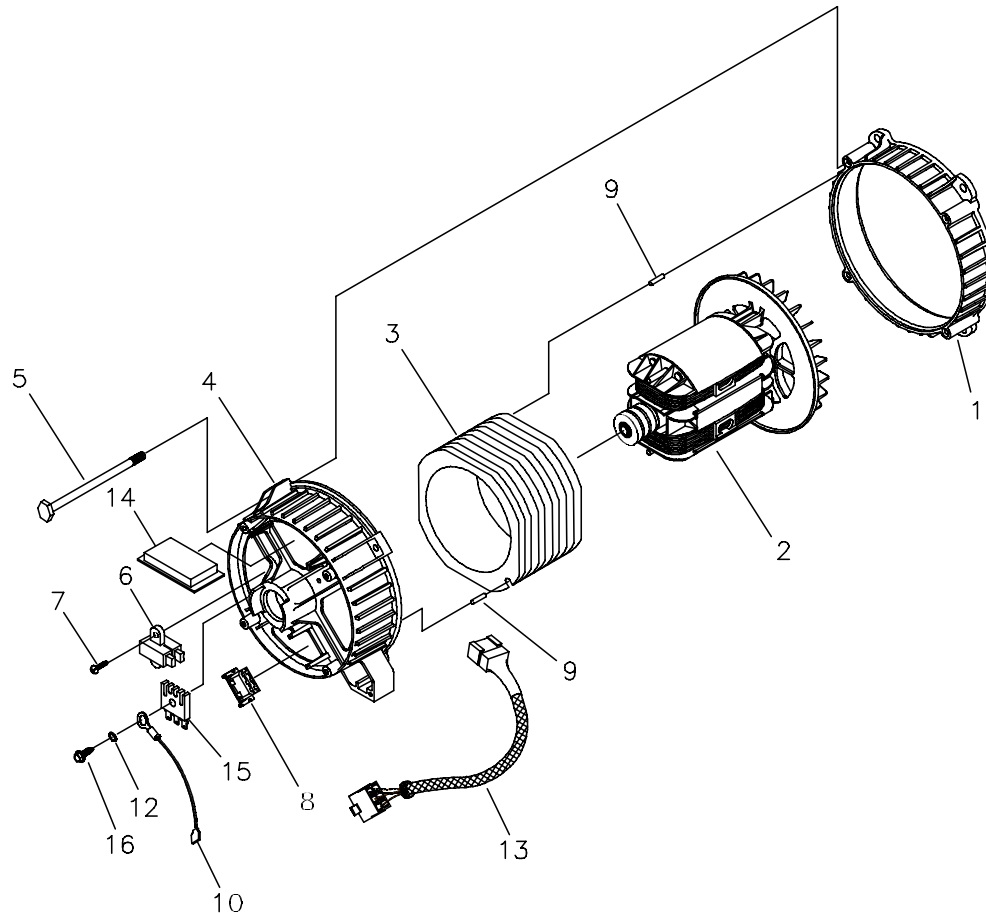


Item	Part #	Qty.	Description
1	186059GS	1	ADAPTER, Mounting, Alternator
2	191876GS	1	ASSY, Rotor
3	192196AGS	1	ASSY, Stator
4	186060GS	1	RBC, with O-Ring (p/n 189197GS)
5	86308HGS	4	SCREW
6	66386GS	1	ASSY, Holder, Rectifier/Brush
7	66849GS	2	SCREW
8	22694GS	1	RECEPTACLE, 6 pin
9	81917GS	2	PIN, Roll
10	191051AGS	1	ASSY, Wire, Ground
12	23762GS	1	WASHER
13	190356GS	1	HARNESS, Wire, Power
14	189769GS	1	REGULATOR, Voltage-AVR
15	65795GS	1	RECTIFIER, Battery Charge
16	66849AGS	1	SCREW

EXPLODED VIEW AND PARTS LIST - CONTROL PANEL

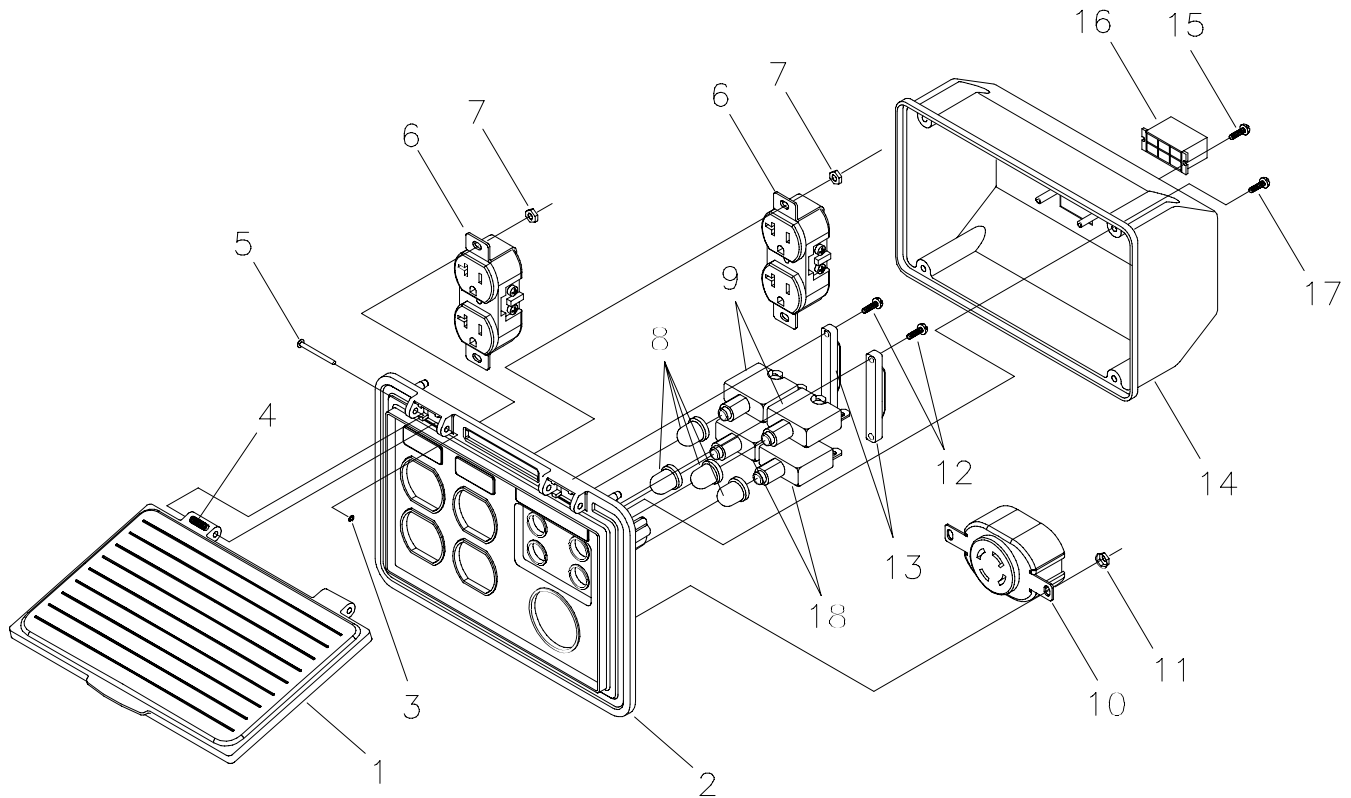

Item	Part #	Qty.	Description
1	188914GS	1	COVER, Lid, Control Panel
2	191450GS	1	CONTROL PANEL, Compact
3	189167GS	2	CLIP, Hinge Pin Retainer
4	189182GS	2	SPRING, Hinge, Pin
5	189166GS	2	PIN, Hinge, Cover, Compact
6	68759GS	2	OUTLET, 120V, 20A, Duplex
7	189165GS	4	NUT
8	84198GS	4	CAP, Breaker, Circuit
9	75207AGS	2	BREAKER, Circuit
10	43437GS	1	OUTLET, 120/240V Locking, 30A
11	189164GS	2	NUT
12	84543CGS	4	SCREW
13	93857GS	2	BAR, Retaining
14	188890GS	1	COVER, Back, Control Panel
15	82308GS	2	SCREW
16	22694GS	1	HOUSING, Receptacle
17	192241GS	4	SCREW
18	75207PGS	2	BREAKER, Circuit

EXPLODED VIEW AND PARTS LIST - WHEEL KIT

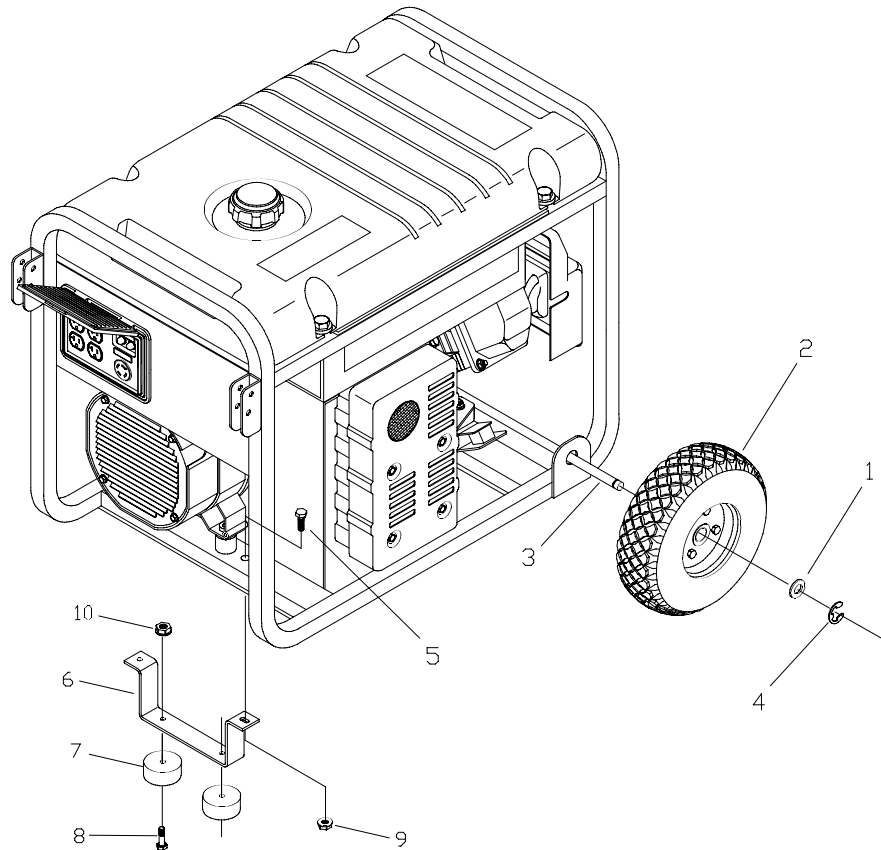

Item	Part #	Qty.	Description
1	22247GS	2	WASHER
2	B4966GS	2	WHEEL
3	I9I267GGS	1	AXLE
4	I9I265GS	2	E-RING
5	39253GS	1	SCREW
6	BI87I0I GS	1	LEG, Support
7	I9I4I3GS	2	VIBE MOUNT, with Washer
8	224I3GS	2	SCREW
9	52858GS	1	NUT, Lock
10	I92432GS	2	NUT, Lock